

CI0907 CALLER ID DISPLAY PHONE OPERATION MANUAL

Thank you for purchasing this Caller ID Telephone. This telephone is one of a new design and innovation series. It performs all basic functions with incoming call display supported by your network providers and most PABX switching system (please consult your switching system provider for details)

TELEPHONE FEATURES

- Ultra-large 3 rows Liquid Crystal Display
- 16-digit LCD dialing number display
- 20 set indirect memory
- 8 countries language selectable
- LCD contrast adjustable (8 levels)
- 30 sets outgoing call message memories
- Counting conversation time automatically
- Real time, date, week display
- Low battery indicator
- In-use LED indicator
- Prefix code and area code setting
- Tone and pulse dialing switch
- Redialing function
- Flash function
- Hands free speaker
- Speaker volume control
- Ringer volume control
- Operate in AAA x 3pcs alkaline batteries

CALL ID FEATURES

- Caller ID dual mode system (DTMF/FSK)
- Real time calibrated by caller ID message automatically
- New incoming call LED indicator
- Supports multi data message format and single data message format
- Receiving DTMF signal, can display call number.
- Receiving FSK signal, can display call number, call time and call name
- 199 sets in-coming call memory
- Upward and downward seeking in-coming call message information and call back the call number which displays on the screen
- Call back from incoming call memories
- Remove incoming call memories (single & all)
- Total calls, new calls, repeat call & call sequence display
- Error incoming call display "Private / Error / Out of area"
- VIP, REJ, FILTER function

NOTE : BEFORE USING YOUR CALLER ID PHONE, YOU MUST INSTALL THE BATTERIES.

TELEPHONE FUNCTION

Installation

Open the battery compartment underneath the unit and insert three "AAA" size alkaline batteries. Please note the correct positioning (+ and -). Connect the modular plug of the telephone line cord into the modular jack at the rear of the telephone base. At the end of this modular plug connect to the telephone line wall jack. Insert the handset coil cord modular plug into the jack at the rear of telephone base. Then, the LCD display is turn on.

Making a call

- Lift the handset or press [☎].
- Wait for the dial tone and then dial the telephone number.
- To terminate the call, replace the handset onto the base unit, or push the hook switch.
- Or press [☎] key again when you are using the hands free speaker.
- Or use the pre-dialing function when the telephone is off-hook, enter the phone number and press [ENTER]. It will dial out the desired number automatically. Then, pick up the handset or start the conversation in the hands free mode.

Receive a call

Whenever the phone ring, pick up the handset or press [☎] key, the In-use LED indicator will light and LCD will displays: converse 00'00. The hands free speaker volume can be adjusted by sliding volume control.

STONE/PULSE selector

If your home is equipped with touch tone dialing service, set the dialing mode to T position, if you have rotary dialing service, set the selector to the P position

Ringer switch

If you don't want to be disturbed by in-coming calls, you can slide the ringer switch to OFF position. Now you can still use the phone to make out-going calls, but all incoming calls will not activate rings.

Speaker volume control

You can adjust the speaker volume by sliding the switch to HI or LO position.

Conversation time

- After you picked up the handset or press the [☎] key, late than 6 seconds will start counting the conversation time.
- Hang up, conversation time will display 5 seconds until enter the standby mode.

Indirect memory storage

- Press [STORE] key and use the [UP]/[DOWN] keys to select the desired storage location (01 to 20).
- Press [ENTER] to enter the phone number by using the numeric keys up to 16 digits.
- Press [ENTER] to input the name up to 14 characters.
- Press [ENTER] to finish the memory storage.

Incoming call memory storage

- Press [UP]/[DOWN] to search the incoming call phone number.
- Press [STORE] key, the LCD will display "COPY TO ?".
- Press the desired storage location from 0 to 9.
- Then the phone number is stored.

Note : This memory capacity of incoming call will share with indirect memory, and total 20 sets memory storage.

Flash

- Press the [FLASH] key, the phone line will break 600 ms.
- You can use this function to apply special service.

Redial

- Pick up the handset or press the [☎] key.
- And press the [REDIAL] key, the last number will dial out

TELEPHONE SETTING

Set up the TIME/DATE

- Press the [MENU] key, then press the [3] key, the telephone enter into date/time setting up mode, the hour begin flash.
- Press the [DOWN] key to adjust the hour.
- Then press the [UP] key, the minute begin to flash.
- Press the [DOWN] key to adjust the minute.
- The process for adjusting month and day and year is same as above.
- Finally press the [ENTER] key to finish the setting up.

Set up the LCD contrast level (8 levels)

- Press the [MENU] key, then press [1] key, the telephone enter into LCD contrast setting up mode.
- Press the [UP] or [DOWN] key to increase or decrease the contrast level.
- Press the [ENTER] key to finish the setting up.

Set up the off-time

- Press the [MENU] key, then press [2] key, the telephone enter into off-time setting up mode.
- Press the [UP] or [DOWN] key to increase or decrease the time.
- Press the [ENTER] key to finish the setting up.

Set up the local area code (5 digits)

- Press the [MENU] key, then press the [4] key, the telephone enter into area code setting up mode.
- Press the [0~9] digit key to input the local area code.
- Press the [ENTER] key to finish the setting up.

Set up long prefix code (1 digits)

- Press the [MENU] key, then press the [5] key, the telephone enter into long prefix setting up mode.
- Press the [0~9] digit key to input the long prefix code.
- Press the [ENTER] key to finish the setting up.

Review the Caller ID message

- Press the [UP]/[DOWN] keys to searching the incoming call message.
- Not press any keys for 15 seconds, it can automatically exit.

Delete the caller ID message

- Press the [UP] or [DOWN] key to get the desired number.
- Press the [DEL] key for more than 0.5 seconds, the number on LCD will be deleted.
- If you press the [DELETE] key and hold it for more than 3 seconds, all caller ID messages will be deleted.

Caller number redial

- Searching the desired caller number by pressing [UP] or [DOWN] or [CHECK] key.
- Press the [ENTER] key, the call number on LCD will be dialed out.

Set VIP or REJ number

- Searching the wanted caller ID number by pressing [UP] and [down] key.
- Press the [FILTER] key once, the number displayed on LCD will be as a REJ number.
- Press the [FILTER] key two times, the number displayed on LCD will be a VIP number.
- If you press the [FILTER] three times, the number displayed on LCD will be a norm number.
- If you receive a REJ call, the telephone will not ring, but it still record the caller ID message.

Undisturbed setting

- If you do not want any call to disturb you, press the [FILTER] key in standby state, then the telephone enter into undisturbed state.
- In this state, the telephone will not ring except the VIP call, but it will record the caller ID message.
- When you pick up the handset or press the [M] key, it will exit the undisturbed state automatically.
- If new call message is a private message, LCD will display WITHHELD.
- If new call message is out of area, LCD will display UNAVAILABLE.
- If the telephone receive a wrong caller ID data, LCD will display LINE ERROR.

NOTE: If the telephone receive the FSK (DTMF) message more than five times, it will enter into FSK (DTMF) mode, except take the batteries out to rest it.

CALLER ID DISPLAY

- If you subscribe to caller ID services from your local telephone company, this telephone will show the call information on the display screen, and the current date and time will also be updated.
- When the incoming call received, the “NEW” icon will be displayed.
- Press [UP] / [DOWN] key to view the incoming call number, or press [DEL] to erase the number.
- If the incoming call is a repeat calling, display will show as “REP”.
- Any error or corrupted information received, the display will show “---E---”
- If the caller has exercised the option to prevent his name and number from being sent, “---P---” will be shown on the screen.
- “---O---” will display, when some one calls from an area where the telephone company is not offering the caller identification services or an area that is not yet providing name and number delivery to your area via the long distance network.
- When caller ID memory is full, it will automatically delete the oldest calls in order to make a room for the new ID number.

Note : The caller ID will only detect information between the first and second rings. You should wait for the second ring before picking up the phone or pressing the hands free button.

MAINTENANCE

- Do not position in areas of high humidity, dust, high temperature, mechanical shock or strong sunlight.
- Do not position in bathrooms or near water.
- Do not disassemble the telephone, it contains no user-serviceable parts.
- Do not place this product on an unstable cart, stand or table. The product may fall and causing serious damage to itself.
- It is recommended to disconnect the telephone line from the wall socket during the thunderstorms, as lightning might seriously damage the telephone. The warranty does not cover damage caused by lightning.
- Do not attempt to recharge the batteries that are used with this product.
- All batteries should be replaced at the same time. Mixing fresh and exhausted batteries could increase internal cell pressure and rupture the exhausted batteries.

FAULT FINDING

- No dial tone.
Make sure all connection of coil cord and line cord are connected securely to the jacks.
Check the telephone operation in master telephone socket. There may be a fault with the line in which case contact your network operator.
- No display on the LCD.
Make sure the battery has put in the correct positions (+ and -) or replace another new alkaline batteries, and adjust the contrast level.
- Do not ring.
Make sure the ringer switch setting on High position.
- If the Hands Free speaker does not work.
Verify that the line cord has connection is correct and tightly secured.
Adjust the speaker volume level, and check the batteries are not exhausted.
- All the memories lose.
All the memories will be lost within 30 seconds, if the telephone line cord disconnected when the batteries replacing. Then, you have to program all memory banks again.
- Caller name and number do not display.
Did you wait for the second ring before picking up the phone or pressing the hands free button ? The caller ID will only detect information between the first and second ring.
- Contact your telephone company if the problem continues for more than 24 hours. The telephone company may be experiencing temporary line.