

## CI 1517 CALLER ID DISPLAY PHONE

Thank you for purchasing this Design Caller ID Display Telephone. This design telephone is one of a new design and innovation series. It performs all basic functions with incoming call display supported by your network providers and most PABX switching system (please consult your switching system provider for details)

### TELEPHONE FEATURES

- Large LCD with 2 lines display (16 digits)
- Conversation timer
- Real time & date display
- Last number redial
- Outgoing call memory
- Pause function
- Flash function
- Area code setting
- Long Distance IP code setting
- Hands free speaker function
- On-hook pre-dialing function
- LCD contrast setting (5 levels)
- Music on hold function
- Music on hold melody selection
- Tone/Pulse dialing setting
- Flash time setting (90-1000ms)
- Alarm call setting (3 groups)
- Ringer melody selection (8 levels)
- Speaker volume control (3 levels)
- Operate in AAA x 3pcs alkaline batteries

### CALLER ID FEATURES

- CALLER ID dual mode system (DTMF & FSK)
- Real time calibrated by Caller ID message automatically
- 50 sets incoming call memory
- Call back from incoming call memories
- Remove incoming call memories (single & all)
- New incoming call indication
- Total calls, new calls, repeat call & call sequence display
- Error incoming call display "Private / Error / Out of area"

### INSTALLATION

Open the battery compartment underneath the unit and insert three "AAA" size alkaline batteries. Please note the correct positioning (+ and -). Connect the modular plug of the telephone line cord into the modular jack at the rear of the telephone base. At the end of this modular plug connect to the telephone line wall jack. Insert the handset coil cord modular plug into the jack at the rear of telephone base. Then, the LCD display is turn on.

### A. MAKING A CALL

1. Lift the handset or press [HANDS FREE].
2. Wait for the dial tone and then dial the telephone number.
3. To terminate the call, replace the handset onto the base unit, or push the hook switch, or press [FLASH] key.
4. Press the [HANDS FREE] key again when you are using the hands free speaker.

*Note : If your phone is connected behind a PABX switching system, you may enter the (REDIAL) into the dialing sequence to insert a timed delay "Pause function" when necessary.*

### B. ON HOOK PRE-DIALING

1. During the on hook state, press the telephone numbers.
2. Press [BACK] key, the hands free speaker will power on and dial out the desired phone number automatically.

### C. DIAL OUT THE NUMBER FROM INCOMING CALL MEMORY

1. Press [UP] / [DOWN] to search the incoming call number and press [BACK] to dial out the number.
2. Press [DEL] to erase the number, or press [VIP] to lock the desired incoming call number which can not be erased.

### D. DIAL OUT THE NUMBER FROM OUTGOING CALL MEMORY

1. Press [OUT] enter into the outgoing call memory, and press [OUT] key again to select the desired outgoing call number.
2. Press [BACK] to dial out the desired number.
3. Press [DEL] to erase the number.

### E. TALKING TIMER

When the handset lift up or press [HANDS FREE] key, the talking timer will be enabled automatically.

### F. SETTING MODE

During the on-hook state, press [SET] and enter into the setting mode.

#### 0) Prefix Code Setting (3 digits)

1. Press [0] to set the prefix code.
2. Or press [\*] disable the prefix code setting.
3. Press [SET] to confirm the setting and return to the setting menu, or [DEL] exit the setting menu.

#### 1) Date and Time Setting

1. Press [1] to set the year, month, date and time.
2. Press [SET] to confirm the setting and return to the setting menu, or [DEL] exit the setting menu.

#### 2) LCD Contrast Level Setting Mode (5 levels)

1. Press [2] to set LCD contrast level.

2. Press [UP / DOWN] key to select the desired level.
3. Press [SET] to confirm the setting and return to the setting menu, or [DEL] exit the setting menu.

#### 3) Area Code Setting (5 digits)

1. Press [3] to set area code.
2. Press [SET] to confirm the setting and return to the setting menu, or [DEL] exit the setting menu.

#### 4) Tone / Pulse Dialing and Flash Time Setting

1. Press [4] and [1] to set Tone / Pulse dialing.
2. Press [UP / DOWN] key to select the desired dialing mode.
3. Press [4] and [2] to set the flash time.
4. Press [UP / DOWN] key to select the desired flash time.
5. Press [SET] to confirm the setting and return to the setting menu, or [DEL] exit the setting menu.

#### 5) Alarm Clock Setting (3 groups)

1. Press [5] to set the alarm clock.
2. Press [5] and [1] to set the alarm clock-group 1.
3. Press [\*] to enable and set the alarm clock, or disable the alarm clock.
4. Press [SET] top confirm the setting and return to the setting menu, or [DEL] exit the setting menu.

#### 6) Long Distance Code Setting (5 digits)

1. Press [6] to set the long distance code setting.
2. Or press [\*] to disable the code setting.
3. Press [SET] to confirm the setting and return to the setting menu, or [DEL] exit the setting menu.

#### 7) Ringer Melody Selection (8 levels)

1. Press [7] and [UP / DOWN] key to select the desired ringer melody.
2. Press [SET] to confirm the setting and return to the setting menu, or [DEL] exit the setting menu.

### G. SPEAKER VOLUME CONTROL (4 LEVELS)

Switch on the hands free speaker, press [VOL] to adjust the speaker volume.

### H. LAST NUMBER REDIAL

1. Lift the hand set or switch on the hands free speaker, press [REDIAL].
2. The last dialed number will redial automatically.

### I. MUSIC ON HOLD

1. During the conversation, you can press [HOLD] key to hold up the line. The other end will hear the music.
2. Press [UP / DOWN] to select the desired HOLD music.
3. Press the [HOLD] key again to return the conversation.

## **J. FLASH**

1. Press the (FLASH) button, the phone line will break and disconnected.
2. You can use this function to utilize the special services. (please consult your switching system provider for details)

## **K. CALLER ID DISPLAY**

1. If you subscribe to caller ID services from your local telephone company, this telephone will show the call information on the display screen, and the current date and time will also be updated.
2. When the incoming call received, the “NEW” icon will be displayed.
3. Press [UP] / [DOWN] key to view the incoming call number, or press [DEL] to erase the number.
4. If the incoming call is a repeat calling, display will show as “REP”.
5. Any error or corrupted information received, the display will show “---E---”
6. If the caller has exercised the option to prevent his name and number from being sent, “---P---” will be shown on the screen.
7. “---O---” will display, when some one calls from an area where the telephone company is not offering the caller identification services or an area that is not yet providing name and number delivery to your area via the long distance network.
8. When caller ID memory is full, it will automatically delete the oldest calls in order to make a room for the new ID number.

*Note : The caller ID will only detect information between the first and second rings. You should wait for the second ring before picking up the phone or pressing the hands free button.*

## **MAINTENANCE**

1. Do not position in areas of high humidity, dust, high temperature, mechanical shock or strong sunlight.
2. Do not position in bathrooms or near water.
3. Do not disassemble the telephone, it contains no user-serviceable parts.
4. Do not place this product on an unstable cart, stand or table. The product may fall and causing serious damage to itself.
5. It is recommended to disconnect the telephone line from the wall socket during the thunderstorms, as lightning might seriously damage the telephone. The warranty does not cover damage caused by lightning.
6. Do not attempt to recharge the batteries that are used with this product.
7. All batteries should be replaced at the same time. Mixing fresh and exhausted batteries could increase internal cell pressure and rupture the exhausted batteries.

## **FAULT FINDING**

1. No dial tone.  
Make sure all connection of coil cord and line cord are connected securely to the jacks.  
Check the telephone operation in master telephone socket. There may be a fault with the line in which case contact your network operator.
2. No display on the LCD.  
Make sure the battery has put in the correct positions (+ and -) or replace another new alkaline batteries, and adjust the contrast level.
3. Do not ring.  
Check the ringer volume setting.
4. If the Hands Free speaker does not work.  
Verify that the line cord has connection is correct and tightly secured.  
Adjust the speaker volume level, and check the batteries are not exhausted.
5. Caller number do not display.  
Did you wait for the second ring before picking up the phone or pressing the hands free button ? The caller ID will only detect information between the first and second ring.
6. Contact your telephone company if the problem continues for more than 24 hours. The telephone company may be experiencing temporary line.