

## **CALL ID DISPLAY PHONE CI1810** **OPERATING MANUAL**

### **Telephone Features**

1. Large LCD with 22 characters & 15 digits (3 lines display)
2. 4 country languages display (English, Italian, Germany, Spanish)
3. 50 phonebook memories with name
4. Quick search from phonebook memories
5. 3 one touch direct memories
6. Conversation timer
7. LCD contrast adjustable (4 levels)
8. Real time & date display
9. Low battery indicator
10. Last numbers redial memory
11. Pause function
12. Flash function
13. Area code setting
14. Prefix code setting
15. Ringer volume control (Hi/Lo)
16. Tone dialing only
17. Operate in AA x 4pcs alkaline batteries
18. Wall mount & desktop

### **Caller ID Features**

1. Caller ID dual mode system (DTMF & FSK)
2. Real time calibrated by Caller ID message automatically
3. 45 sets incoming call memory
4. Call back from incoming call memories
5. Caller name matching with the phonebook memories
6. Remove incoming call memories (single & all)
7. New incoming call LED indicator
8. Total calls, new calls, repeat call & call sequence display
9. Error incoming call display “Private / Error / Out of area”

### **INSTALLATION**

Open the battery cover located under the unit and insert four AA alkaline batteries. Please note the correct positioning (+ and -). Connect the telephone Line Cord to the Line Socket. The LCD display is turn on.

*Note : If the batteries exhausted, all the memories and setting will be erased. You may replace the new battery and input the memory and setting again.*

### **OPERATION**

#### **A. Save the Telephone Numbers and Name into Phone Book**

1. Press [Store] key. The display will show “ENTER NUMBER”.
2. Enter the phone number by using the numeric keys and the [Pause] key up to 22 digits. The message “ENTER NUMBER” will be replaced by user entered number.
3. The user may press [UP] or [DOWN] key to move the cursor to the desired position. Press [Delete] key once will delete the letter at the cursor position and press numeric keys to insert a number.
4. After the telephone number has been entered, press [Store] key. The LCD will then show “ENTER NAME”.
5. The message “ENTER NAME” will be replaced by user entered letter through the numeric keypad\*. For example, digit [2] key will have A, B and C on it. Pressing [2] key once will give you the letter “A” and twice will give you “B”.
6. Press [UP] or [DOWN] key to move the cursor to the desired position for editing. Press [Delete] key once will delete the letter at cursor position and press numeric keys to insert a letter.
7. After the name has been entered, press [Store] key again to save the name and phone number that was entered. The LCD will show the message “\*\*STORED\*\*” for 2 seconds and then revert back to Real Time Clock.

*Note : If your phone is connected behind a PABX switching system, you may enter the (REDIAL) into the dialing sequence to insert a timed delay “Pause function” when necessary.*

\* Letters and symbols in numeric keypad:

[1]	Space . , ? ! - “ ‘ ( ) 1	[7]	P Q R S 7 \$
[2]	A B C 2 Å Ä Å Ä Å Ç Æ	[8]	T U V 8 Ü Ú Û Û
[3]	D E F 3 É È Ê Ë	[9]	W X Y Z 9
[4]	G H I 4 Í Î Ï Ĝ Ĩ	[0]	0 + & @ / \$ % £
[5]	J K L 5	[*]	*
[6]	M N O 6 Ñ Ò Ó Ô Õ	[#]	#

### **B. Save the Telephone Number and Name into Direct Memory**

1. Repeat procedures 1 to 7 in Section A.
2. After the name has been entered, press [M1]...[M3] keys to save the number into a direct memory. The LCD will show the message “\*\*STORED\*\*” for two seconds then revert back to Real Time Clock.

Note : If your phone is connected behind a PABX switching system, you may enter the (REDIAL) into the dialing sequence to insert a timed delay “Pause function” when necessary.

### **C. Search the Name from the Phone Book and Dial Out**

1. Press [ABC] key once. The ABC icon will be turned on and the LCD will show “ENTER NAME ”.
2. The message “ ENTER NAME ” will be replaced by the user entered key through the numeric keypad. For example, digit [2] key will A, B, and C on it. Pressing [2] key once will give you the letter “A” and twice will give you “B”.
3. Enter as many letters as you like to be a searching hint. Press [UP] or [DOWN] key once to start searching.
4. The 1st matching name and number will be shown.
5. Press [UP] or [DOWN] key to find the previous/next matched name.
6. Press [ABC] key to re-enter the name (back to step 1).  
If the desired name has been found, lift the handset and press [Call Back] key.

### **D. Dial Out the Number in Direct Memory**

1. Pick up handset and press [M1]... [M3] to dial out the stored number. Both the name and number will be shown on the display.
2. The dialing can be achieved by other sequences:  
Pick up the handset Press [M1]... [M3] [Call Back]

### **E. Dial Out a Number in CID Calls Memory**

Pick up the handset, and press [UP] or [DOWN] to select the desired CID call and then press [Call back] key.

### **F. Delete a Record from Phone Book or Direct Memory**

1. Search the record as in Section C or press [M1]... [M3] to select desired record.
2. Press [DELETE] key then the display shows “CLEAR?”
3. Press [DELETE] key again to confirm. Display shows call “disappearing” from the screen.

4. Or press other keys to exit.

### **G. Delete a CID Call**

1. Press [UP] or [DOWN] to select the desired CID call.
2. Press [DELETE] key then the display shows “CLEAR?”
3. Press [DELETE] key again to confirm. Display shows call “disappearing” from the screen.
4. Or press other keys to exit.

### **H. Delete all CID Calls**

1. Press [UP] or [DOWN] to switch to CID call display.
2. Press [DELETE] key for 4 seconds then the display shows “ALL CLEAR?”
3. Press [DELETE] key again to confirm. Display shows call “disappearing” from the screen.
4. Or press other keys to exit.

### **I. Edit a Record from Phone Book or Direct Memory**

1. Search the record as in Section C or press [M1]... [M3].
2. Press [Store] key. Display shows the phone number and the cursor is placed on the first digit of numeric line.
3. Use [UP] or [DOWN] key to move to the location where the number is to be edited. Once at the desired location, the user can press [DELETE] key to delete the number at the cursor position or press numeric key to insert a number.
4. After the telephone number has been edited, press [Store] key to swap cursor to the third line and the display shows the name. If there is no name associated, the display shows “ENTER NAME”.
5. Use [UP] or [DOWN] key to move to the location where the letter is to be edited. Once at the desired location, the user can press [Delete] key to delete the letter at the cursor position or press numeric key to insert a letter.
6. After the name has been edited, press [Store] key again to save the name and number that was edited. The LCD will show the message “\*\*STORED\*\*” for 2 seconds and then revert back to Real Time Clock.

### **J. Copy and edit the telephone number from Phone Book to Direct Memory**

1. Repeat procedures 1 to 5 in section I.
2. After the name has been edited, press [M1]...[M3] key to save the name and

number that was edited to a desired memory location. The LCD will show the message “\*\*STORED\*\*” for 2 seconds and then revert back to Real Time Clock.

#### **K. Edit a CID Call and Save into Phone Book**

1. Press [UP] or [DOWN] to select the desired CID call.
2. Press [Store] key. Display shows the phone number and the cursor is placed on the first digit of numeric line.
3. Repeat procedures 3 to 6 in Section I.

#### **L. Edit a CID Call and Save into Direct Memory**

1. Press [UP] or [DOWN] to select the desired CID call.
2. Press [Store] key. The LCD shows the phone number and the cursor is placed on the first digit of numeric line.
3. Repeat procedures 3 to 5 in Section I.
4. After the name has been edited, press one of the twelve memory keys [M1]...[M3] to save the name and phone number that was edited. The LCD will show the message “\*\*STORED\*\*” for 2 seconds then revert back to Real Time Clock.

#### **M. Redial**

1. Pick up the handset and press [Redial] key will dial out the latest dialed out number.

#### **N. Redial a Number Stored in Redial Buffer**

1. During On-Hook state, press [Redial] key then display shows order number “1” and latest dialed out number.
2. Use [UP] or [DOWN] or [REDIAL] to select one of the last 3 dialed number in redial buffer. Display shows the order number “1” to “3” respectively.
3. After search, press [Call Back] key and pick up the handset.

#### **O. Low Battery Indication**

When batteries are exhausted, the battery low icon will turn on to indicate battery replacement. The battery status is checked every half second.

#### **P. Talking Timer**

When the handset pick up, the talking timer will be enabled automatically.

#### **Q. Setting Mode**

There are four settings can be input including language selection, area code, long distance prefix and real time clock. Press and hold the [DOWN] key for 4 seconds to enter the language selection mode.

##### **a) Language Selection (Default : English language)**

1. LCD shows current language e.g. “ENGLISH”
2. Press [UP] or [DOWN] key until the desired language is shown.
3. Press [Store] key to confirm and enter area code setting mode.

##### **b) Area Code Setting Mode**

1. LCD shows “AREA CODE”.
2. Enter the area code by using the numeric keypad. (e.g. Area code 755: set 755 - -)
3. Press [Delete] key to cancel the setting (LCD shows “- - - -”) and re-enter the code.
4. Press [Store] key to confirm and enter dial prefix setting.

##### **c) Dial Prefix for Long Distance**

1. LCD shows “Dial Prefix”
2. Enter the dial prefix by using the numeric keypad. (e.g. long distance dial prefix of USA is “1”: set 1 - - -)
3. Press [Delete] key to cancel the setting (LCD shows “- - - -”) and re-enter the code.
4. Press [Store] key to confirm and enter real time clock setting mode.

##### **d) Setting the Real Time Clock**

1. LCD shows “DD/MM HH:MM”
2. Enter the real time clock by using the numeric keypad. Input the real time clock in 24-hour format only.
3. Press [Delete] key to cancel the setting (LCD shows “01/01 0:00”) and re-enter the real time clock.
4. Press [Store] key to exit.

#### **R. LCD Contrast adjustment**

1. Press and hold the [UP] key for 4 seconds, the LCD will display 15 digits number “333333333333333”.
2. Press [UP] / [DOWN] to adjust the LCD contrast in 4 levels.
3. Press any key to exit.

## **S. Incoming Call Display**

1. If you subscribe to caller ID services from your local telephone company, this telephone will show the call information on the display screen. This includes the caller name (if you have stored the name and phone number in the phone book or direct memory) and number.
2. When the incoming call received, the number of new calls “XX NEW” and the total number of calls “XX CALL” will appear on the display.
3. The incoming call LED will flash.
4. If the incoming call is a new calling, display will show as “NEW”. And, the repeat calling will display as “RPT”.
5. Any error or corrupted information received, the display will show “Error”
6. If the caller has exercised the option to prevent his name and number from being sent, “Private” will be shown on the screen.
7. “Out of Area” will display, when some one calls from an area where the telephone company is not offering the caller identification services or an area that is not yet providing name and number delivery to your area via the long distance network.
8. When caller ID memory is full, it will automatically delete the oldest calls in order to make a room for the new ID number.
9. Replace batteries as soon as possible when the low battery icon display.
10. Note : The caller ID will only detect information between the first and second rings. You should wait for the second ring before picking up the phone or pressing the hands free button.

## **T. RINGER VOLUME CONTROL**

You can set the ringer switch to the desired level on the side of the unit.

*Note : Default setting is high level.*

## **U. WALL MOUNTING**

If you are wall mounting this telephone, the position of two holes is 90mm apart.

## **MAINTENANCE**

1. Do not position in areas of high humidity, dust, high temperature, mechanical shock or strong sunlight.
2. Do not position in bathrooms or near water.
3. Do not disassemble the telephone, it contains no user-serviceable parts.
4. Do not place this product on an unstable cart, stand or table. The product may fall and causing serious damage to itself.
5. It is recommended to disconnect the telephone line from the wall socket during

the thunderstorms, as lightning might seriously damage the telephone. The warranty does not cover damage caused by lightning.

6. Do not attempt to recharge the batteries that are used with this product.
7. All batteries should be replaced at the same time. Mixing fresh and exhausted batteries could increase internal cell pressure and rupture the exhausted batteries.

## **FAULT FINDING**

1. No dial tone.  
Make sure all connection of coil cord and line cord are connected securely to the jacks.  
Check the telephone operation in master telephone socket. There may be a fault with the line in which case contact your network operator.
2. No display on the LCD.  
Make sure the battery has put in the correct positions (+ and -) or replace another new alkaline batteries, and adjust the contrast level.
3. Do not ring.  
Make sure the ringer switch setting on High position.
4. If the Hands Free speaker does not work.  
Verify that the line cord has connection is correct and tightly secured.  
Adjust the speaker volume level, and check the batteries are not exhausted.
5. All the memories lose.  
All the memories will be lost within 30 seconds, if the telephone line cord disconnected when the batteries replacing. Then, you have to program all memory banks again.
6. Caller name and number do not display.  
Did you wait for the second ring before picking up the phone or pressing the hands free button ? The caller ID will only detect information between the first and second ring.
7. Contact your telephone company if the problem continues for more than 24 hours. The telephone company may be experiencing temporary line.