

CI2017S SMS PHONE

Thank you for purchasing this Design SMS Display Telephone. This design telephone is one of a new design and innovation series. It performs all basic functions with SMS functions and incoming call display supported by your network providers and most PABX switching system (please consult your switching system provider for details) Telephone Features

TELEPHONE FEATURES

1. Large LCD with 14 characters & 16 digits (3 lines display)
2. 20 indirect memories with name
3. VIP direct memory
4. Conversation timer
5. Real time & date display
6. Low battery indicator
7. Last 10 number redial function
8. Pause function
9. Flash function
10. Flash time adjustable
11. Area code setting
12. Reset function
13. Ringer melody selection (3 tones)
14. Ringer volume control (3 levels)
15. LCD contrast adjustable (5 levels)
16. Speaker volume control (4 levels)
17. On-hook pre-dialing function
18. Tone dialing only
19. Operate in AAA x 3pcs alkaline batteries

CALLER ID FEATURES

1. CID dual mode system (DTMF & FSK)
2. Real time calibrated by Caller ID message automatically
3. 20 sets incoming call memory
4. Call back from incoming call memories
5. Remove incoming call memories (single & all)
6. Message waiting indicator (Optional)
7. Call waiting function (Optional – FSK Type II)
8. New incoming call indicator
9. Total calls, new calls, repeat call & call sequence display
10. Error incoming call display “Private Call / Error / Out of area”

SMS FEATURES

1. Compatible Italian or Germany SMS standard
2. New incoming SMS message indicator
3. Send and receive SMS function
4. More than 6780 bytes memory for SMS storage.
5. Minimum 42 x 160 characters message storage. (Data will not lose when power off)
6. Sending short messages (up to 160 characters) or long message (up to 640 characters)
7. Sending SMS message
8. Inbox / Outbox messages review / delete / edit / save
9. Last send / edit message storage
10. Audible message alert

11. Inbox and outbox messages setting
12. SMS service center number setting

INSTALLATION

Open the battery cover located under the unit and insert four “AAA” batteries. Please note the correct positioning (+ and -). Connect the telephone Line Cord to the Line Socket. The LCD display is turn on.

OPERATION

A. SAVE THE TELEPHONE NUMBERS AND NAME INTO INDIRECT MEMORY OR VIP MEMORY

1. Press [STORE] and [YES] key. The display will show “NAME”.
2. Enter the name by using the numeric keys up to 16 characters.
3. The user may press [DEL] key to delete the letter.
4. After the name has been entered, press [YES] key. The LCD will then show “NUMBER”.
5. Enter the phone number by using the numeric keys up to 22 digits.
6. After the number has been entered, press [M1] key to save the name and phone number to direct memory or [STORE] key to save in the indirect memory.

Note : If your phone is connected behind a PABX switching system, you may enter the (REDIAL) into the dialing sequence to insert a timed delay “Pause function” when necessary.

* Letters and symbols in numeric keypad:

| | |
|-----|------------------------------|
| [1] | Space . , ? ! – “ ‘ () 1 |
| [2] | A B C 2 Ä Å Á À Â Ç Æ |
| [3] | D E F 3 É È Ê Ë |
| [4] | G H I 4 Í Î Ï Ñ Ò |
| [5] | J K L 5 |
| [6] | M N O 6 Ñ Ò Ó Ô Õ |
| [7] | P Q R S 7 ß \$ |
| [8] | T U V 8 Ú Û Ü |
| [9] | W X Y Z 9 |
| [0] | 0 + & @ / \$ % £ |
| [*] | * |
| [#] | # Capital Letter lock/unlock |

B. SEARCH THE NAME FROM THE PHONE BOOK AND DIAL OUT

1. Press [DOWN] key enter into the memory indirect memory phonebook.
2. Press the [UP/DOWN] key to search the saved phone number in indirect memory, or press [M1] in the direct memory.
3. If the desired name has been found, press [YES] or [HF] key during on-hook state or lift the handset to dial out the corresponding number.

C. DIAL OUT A NUMBER IN CALLER ID CALLS MEMORY

1. Press [UP] key enter into the Caller ID memory.
2. Press the [UP/DOWN] key to search the phone number.

3. After the desired number found, press [YES] / [HF] key to dial out the desired number automatically.

D. DELETE A RECORD FROM INDIRECT MEMORY

1. Search the desired record as in Section B.
2. Press [DEL] key and confirmed by press [YES].
3. Or press [NO] key to exit.

E. DELETE THE CALLER ID CALL

1. Search the desired Caller ID call record as in Section C.
2. Press [DEL] key to delete the single call or press and hold the [DEL] key to delete all the call records.
3. Press [YES] key to confirm, or press [NO] key to exit.

F. ON HOOK PRE-DIALING

1. During the on hook state, press the telephone numbers.
2. Lift the handset or press [HF].
3. The desired phone number will dial out automatically.
4. Or press [NO] key to exit.

G. EDIT A RECORD FROM INDIRECT MEMORY

1. Search the desired record as Section B.
2. Press [STORE] and [EDIT] key to edit the name, and press [YES] to confirm.
3. Edit the phone number, and press [YES] to confirm or [NO] to exit the setting.

H. SAVE THE CALLER ID CALL INTO INDIRECT MEMORY

1. Search the desired record as Section C.
2. Press [STORE] and [EDIT] key to edit the name, and press [YES] to confirm.
3. Edit the phone number, and press [YES] to confirm or [NO] to exit the setting.

I. REDIAL

During the handset lift or speaker phone on, press [REDIAL] key will dial out the latest dialed out number.

J. REDIAL A NUMBER STORED IN REDIAL BUFFER

1. During On-Hook state, press [REDIAL] key.
2. Use [UP] or [DOWN] key to select the last 10 dialed number in redial buffer.
3. After search, press [HF] or [YES] key to dial out the selected redial-number (speaker is turned on automatically).

K. LOW BATTERY INDICATION

When batteries are exhausted, the battery low icon will turn on to indicate battery replacement. The battery status is checked every half second.

L. TALKING TIMER

When Off Hook or press [HF] key, the talking timer will be enabled automatically.

M. SETTING MODE

There are two settings including PHONE SETUP and SMS SETUP. Press the [MENU] key to enter the setting mode, and use the [UP]/[DOWN] key to enter the selection mode. Or press [NO] to exist the setting mode at any time.

I) PHONE SETUP

a) Ringer Melody (3 levels)

1. Press [UP] or [DOWN] key to select the desired ringer melody.
2. Press [YES] to confirm the setting after selected, or press [NO] key to exit the setting mode.

b) Ringer Volume (3 levels)

1. Press [UP] or [DOWN] key to select the desired ringer volume.
2. Press [YES] to confirm the setting after selected, or press [NO] key to exit the setting mode.

c) LCD Contrast (5 Levels)

1. Press [UP] or [DOWN] key to select the desired contrast level.
2. Press [YES] to confirm the setting after selected, or press [NO] key to exit the setting mode.

d) Date/Clock Setting

1. Press [UP] or [DOWN] key to adjust the year.
2. Press [YES] key to confirm the setting, and press [UP] / [DOWN] key to continue the month, date, hour and minutes setting.
3. Or press [NO] to exit the setting mode.

e) Language Selection

1. Press [UP] or [DOWN] key to select the desired language.
2. Press [YES] to confirm the setting after selected, or press [NO] key to exit the setting mode.

f) Area Code Setting

1. Use the numeric key to input the area code, and press [YES] to confirm the setting.
2. Or press [NO] key to exit the setting mode.

e) Flash Time Setting (100/120/180/300/600/1000 ms)

1. Press [UP] or [DOWN] key to select the flashing time.
2. Press [YES] to confirm the setting after selected, or press [NO] key to exit the setting mode.

e) Reset

1. The function will reset the phone to the factory default setting.
2. Press [YES] to confirm the setting after selected, or press [NO] key to exit the setting mode.

II. SMS MESSAGE SETUP

a) Inbox Message

1. Press [UP] / [DOWN] or [VIEW] to check the inbox message.
2. Press [YES] and [EDIT] to edit the message.
3. Press [YES] to confirm the edit and enter the SMS phone number.
4. Press [YES] to confirm and select the desired option "Send only / Save and send / Save only"
5. Or press [NO] to exit the setting mode.
6. If the SMS phone number is incorrect, the LCD will display "Fail, try again".
7. Then, press [YES] or [NO] to confirm again.

b) Outbox Message

1. Press [UP] / [DOWN] to check the outbox message.
2. Press [YES] and [EDIT] to edit the message.

3. Press [YES] to confirm the edit and enter the SMS phone number.
4. Press [YES] to confirm and select the desired option "Send only / Save and send / Save only"
5. Or press [NO] to exit the setting mode.
6. If the SMS phone number is incorrect, the LCD will display "Fail, try again".
7. Then, press [YES] or [NO] to confirm again.

c) Write a New Message

1. Press [UP] / [DOWN] or [WRITE] to edit a new message.
2. Press [YES] to confirm the edit and enter the SMS phone number.
3. Press [YES] to confirm and select the desired option "Send only / Save and send / Save only"
4. Or press [NO] to exit the setting mode.
5. If the SMS phone number is incorrect, the LCD will display "Fail, try again".
6. Then, press [YES] or [NO] to confirm again.

d) Retrieve Saved Message

1. This function will retrieve the saved SMS message and send out automatically.

d) SMS Setup

Press [UP] or [DOWN] key to select the desired setting.

1. SMS Center Number (Submit number – Message out / Deliver number – Message in)
2. SMS Activate (On/Off)
3. SMS Notify (On/Off)
4. Auto Answer (press [UP] / [DOWN] to set how many ring to answer the SMS)

N. CALLER ID DISPLAY

1. If you subscribe to caller ID services from your local telephone company, this telephone will show the call information on the display screen. This includes the caller name (if you have stored the name and phone number in the phone book or direct memory) and number.
2. When the incoming call received, the number of new calls "XX" will display on the phone, and the icon "N" will appear and flashing.
3. If the incoming call is a new calling, display icon will show as "N". And, the repeat calling will display as "R".
4. Any error or corrupted information received, the display will show "Error"
5. If the caller has exercised the option to prevent his name and number from being sent, "Private Call" will be shown on the screen.
6. "Out of Area" will display, when some one calls from an area where the telephone company is not offering the caller identification services or an area that is not yet providing name and number delivery to your area via the long distance network.
7. When caller ID memory is full, it will automatically delete the oldest calls in order to make a room for the new ID number.
8. Replace batteries as soon as possible when the low battery icon display.

Note : The caller ID will only detect information between the first

and second rings. You should wait for the second ring before picking up the phone or pressing the hands free button.

O. SPEAKER VOLUME CONTROL (4 LEVELS)

To adjust the speaker volume to your desired listening level, press [HF] and [VOL+] / [VOL-] to adjust the level.

MAINTENANCE

1. Do not position in areas of high humidity, dust, high temperature, mechanical shock or strong sunlight.
2. Do not position in bathrooms or near water.
3. Do not disassemble the telephone, it contains no user-serviceable parts.
4. Do not place this product on an unstable cart, stand or table. The product may fall and causing serious damage to itself.
5. It is recommended to disconnect the telephone line from the wall socket during the thunderstorms, as lightning might seriously damage the telephone. The warranty does not cover damage caused by lightning.
6. Do not attempt to recharge the batteries that are used with this product.
7. All batteries should be replaced at the same time. Mixing fresh and exhausted batteries could increase internal cell pressure and rupture the exhausted batteries.

FAULT FINDING

1. No dial tone.
Make sure all connection of coil cord and line cord are connected securely to the jacks.
Check the telephone operation in master telephone socket. There may be a fault with the line in which case contact your network operator.
2. No display on the LCD.
Make sure the battery has put in the correct positions (+ and -) or replace another new alkaline batteries, and adjust the contrast level.
3. Do not ring.
Make sure the ringer switch setting on High position.
4. If the Hands Free speaker does not work.
Verify that the line cord has connection is correct and tightly secured.
Adjust the speaker volume level, and check the batteries are not exhausted.
5. All the memories lose.
All the memories will be lost within 30 seconds, if the telephone line cord disconnected when the batteries replacing. Then, you have to program all memory banks again.
6. Caller name and number do not display.
Did you wait for the second ring before picking up the phone or pressing the hands free button ? The caller ID will only detect information between the first and second ring.
7. Contact your telephone company if the problem continues for more than 24 hours. The telephone company may be experiencing temporary line.