

## CI 2017 CALLER ID DISPLAY PHONE

Thank you for purchasing this Design Caller ID Display Telephone. This design telephone is one of a new design and innovation series. It performs all basic functions with incoming call display supported by your network providers and most PABX switching system (please consult your switching system provider for details)

### TELEPHONE FEATURES

- Large LCD with 3 lines display
- Incoming call LED indicator
- In-use LED indicator
- 15 direct memory
- VIP direct memory
- Conversation timer
- Real time & date display
- Last 8 outgoing call memory with conversation time review
- Last number redial
- On hook pre-dialing function
- Pause function
- Flash function
- Area code setting
- Prefix code setting
- Music on hold (16 melody)
- Calculator function
- Alarm clock function
- Non-disturbance function
- Hands free speaker
- Ringer volume control (16 melody)
- Speaker volume control (4 levels)
- Tone/Pulse dialing
- Operate in AAA x 3pcs alkaline batteries

### CALLER ID FEATURES

- CALLER ID dual mode system (DTMF & FSK)
- Real time calibrated by Caller ID message automatically
- 50 sets incoming call memory
- Call back from incoming call memories
- Remove incoming call memories (single & all)
- New incoming call indication
- Total calls, new calls, repeat call & call sequence display
- Error incoming call display “Private / Error / Out of area”

### INSTALLATION

Open the battery compartment underneath the unit and insert three “AAA” size alkaline batteries. Please note the correct positioning (+ and -). Connect the modular plug of the telephone line cord into the modular jack at the rear of the telephone base. At the end of this modular plug connect to the telephone line wall jack. Insert the

handset cord modular plug into the jack at the rear of telephone base. Then, the LCD display is turn on.

### A. MAKING A CALL

1. Lift the handset or press [HANDS FREE].
2. Wait for the dial tone and then dial the telephone number.
3. To terminate the call, replace the handset onto the base unit, or push the hook switch, or press [FLASH] key.
4. Press the [HANDS FREE] key again when you are using the hands free speaker.

### B. ON HOOK PRE-DIALING

1. During the on hook state, press the telephone numbers.
2. Lift the handset or press [HANDS FREE].
3. The desired phone number will dial out automatically.

### C. SAVE THE TELEPHONE NUMBERS INTO DIRECT MEMORY

1. During the on hook state, press and hold [M1]...[M15] key 3 seconds, LCD will display “DDM”.
2. Enter the phone number by using the numeric keys and the [Pause] key up to 16 digits.
3. The user may press [DEL] key to delete and cancel the memory storage procedure.
4. After the telephone number has been entered, press [M1]...[M15] key to save phone number into the desired memory location.

*Note : If your phone is connected behind a PABX switching system, you may enter the (REDIAL/P) into the dialing sequence to insert a timed delay “Pause function” when necessary.*

### D. SAVE THE TELEPHONE NUMBER INTO VIP DIRECT MEMORY

1. This VIP direct memory is only for incoming call telephone number storage.
2. Press [UP] / [DOWN] key to search the desired incoming call telephone number.
3. Press [VIP] key to save the desired number into VIP direct memory.

### E. DIAL OUT THE NUMBER FROM DIRECT MEMORY / VIP MEMORY

1. Lift the handset or press [HANDS FREE].
2. Press [M1]...[M15] / VIP to dial out the desired telephone number.

### F. DIAL OUT THE NUMBER FROM INCOMING CALL MEMORY

1. Press [UP] / [DOWN] to search the incoming call number.
2. Lift the handset or press [HANDS FREE] button to dial out the number.

### G. DELETE THE CALLER ID CALL

1. Press [UP] / [DOWN] to select the desired incoming call number.
2. Press [DEL] key then the display shows “ERASED”

### H. REDIAL THE NUMBER STORED IN REDIAL BUFFER

1. During the on hook state, press [RD] key then display shows order number “1” and latest dialed out number.
2. Press [RD] key again to select one of the last 8 dialed number in redial buffer.
3. LCD will show the order number “1” to “8” respectively and the conversation time.
4. Lift the handset or press [HANDS FREE], the desired number will dial out automatically.

### I. TALKING TIMER

When the handset lift up or press [HANDS FREE] key, the talking timer will be enabled automatically.

### J. SETTING MODE

Press and hold [SET] key to enter the setting mode

#### a) Date and Time Setting

1. Set “YEAR-MONTH-DATE-TIME”.
2. Press [UP] / [DOWN] key to edit.
3. Press [SET] to confirm and continue on the next setting.
4. Or press [FLASH] to confirm and exit the setting.

#### b) Area Code Setting Mode (5 digits)

1. After completed the date and time setting, it will continue on area code setting mode, and LCD will shows “LOCAL-----”.
2. Press [UP] / [DOWN] key to set the area code (e.g. Area code 755: set 755 - -).
3. Press [SET] key to confirm and continue on the next setting.
4. Or press [FLASH] to confirm and exit the setting.

#### c) Dial Prefix for Long Distance

1. After completed the area code setting, it will continue on prefix code setting mode, and LCD will shows “PRECODE 0”.
2. Press [UP] / [DOWN] key to set the prefix code.
3. Press [SET] key to confirm and continue on the next setting.
4. Or press [FLASH] to confirm and exit the setting.

#### d) Setting the Dialing Mode (Tone / Pulse)

1. After completed the prefix code setting, it will continue on dialing mode setting, and LCD will show “NO PULSE”.
2. Press [UP] / [DOWN] to set the tone or pulse dialing.
3. Press [SET] key to confirm and continues on the next setting.

4. Or press [FLASH] to confirm and exit the setting.

#### **K. RINGER MELODY SETTING (16 MELODIES)**

1. To adjust the ringer melody setting, press the [RING] key during the on hook state.
2. The LCD will display the melody number from 1 to 16.
3. Press [RING] key again to select the desired ringer melody.

#### **L. SPEAKER VOLUME CONTROL**

1. To adjust the speaker volume, switch on the hands free speaker and press [VOL] key.
2. The LCD will display 1 to 4 levels.
3. Press the [VOL] key again to adjust the desired volume level.

#### **M. AUTO-REDIAL**

1. If the destination line is busy, you can use this function to redial the number automatically until the destination is free and connect.
2. Switch on the hands free mode, dial out the desired number and press [ARD] key.
3. This automatic redial function will not stop until a new incoming call received or lift the handset.

#### **N. MUSIC ON HOLD**

1. During the conversation, you can press [HOLD] key to hold up the line. The other end will hear the music.
2. You can also adjust the hold on music by pressing the [UP] key during the hold function is on.
3. Lift the handset or press [HANDS FREE] key to return the conversation.

#### **O. SPEAKING VOLUME SETTING**

To adjust the speaker volume to your desired listening level, move the switch located on the side of the unit.

#### **P. CALLER ID DISPLAY**

1. If you subscribe to caller ID services from your local telephone company, this telephone will show the call information on the display screen, and the current date and time will also be updated.
2. When the incoming call received, the number of new calls "NEW IN" and the total number of calls "CALLS XXX" will appear on the display.
3. Press [UP] / [DOWN] key to view the incoming call number.
4. If the incoming call is a new calling, display will show as "IN". And, the repeat calling will display as "RET".
5. Any error or corrupted information received, the display will show "---E---"

6. If the caller has exercised the option to prevent his name and number from being sent, "---P---" will be shown on the screen.
7. "---O---" will display, when some one calls from an area where the telephone company is not offering the caller identification services or an area that is not yet providing name and number delivery to your area via the long distance network.
8. When caller ID memory is full, it will automatically delete the oldest calls in order to make a room for the new ID number.

*Note : The caller ID will only detect information between the first and second rings. You should wait for the second ring before picking up the phone or pressing the hands free button.*

#### **Q. NON-DISTURBANCE (SLEEPING MODE)**

1. During the non-disturbance mode, the ringer will be switched off and record all the incoming calls and time. But, only incoming calls that are on the VIP list will ring.
2. During the on hook state, press and hold the [HOLD] key for 3 seconds. LCD will display "SLEEP 00-00" and flashing.
3. Press [UP] / [DOWN] key to set the sleeping time and the sleeping time will be incremented by 1 hour.
4. Press [FLASH] to confirm and finished the setting.
5. The sleeping time will be displayed in countdown mode with hours and minutes. When the sleeping time expired, the phone will return to normal mode.
6. During the on hook state mode, press [HOLD] key once to cancel the sleeping mode setting.

#### **R. ALARM SETTING**

1. During on hook, press and hold [CALL] key, the LCD will enter into the alarm clock setting mode.
2. Press [UP] / [DOWN] key to set the hour.
3. Press [CALL] key to confirm and set the minutes by [UP] / [DOWN] key again.
4. Press [CALL] key to confirm and exit the setting.
5. During on hook, press [CALL] key to switch on the alarm.
6. And, press [CALL] key once again to cancel the alarm setting.

#### **S. CALCULATOR**

Calculator function can be used in on hook or off hook state. Press [CAL] enter into the calculator mode.

#### **MAINTENANCE**

1. Do not position in areas of high humidity, dust, high temperature, mechanical shock or strong sunlight.
2. Do not position in bathrooms or near water.
3. Do not disassemble the telephone, it contains no user-serviceable parts.
4. Do not place this product on an unstable cart, stand or table.

The product may fall and causing serious damage to itself.

5. It is recommended to disconnect the telephone line from the wall socket during the thunderstorms, as lightning might seriously damage the telephone. The warranty does not cover damage caused by lightning.
6. Do not attempt to recharge the batteries that are used with this product.
7. All batteries should be replaced at the same time. Mixing fresh and exhausted batteries could increase internal cell pressure and rupture the exhausted batteries.

#### **FAULT FINDING**

1. No dial tone.  
Make sure all connection of coil cord and line cord are connected securely to the jacks.  
Check the telephone operation in master telephone socket. There may be a fault with the line in which case contact your network operator.
2. No display on the LCD.  
Make sure the battery has put in the correct positions (+ and -) or replace another new alkaline batteries, and adjust the contrast level.
3. Do not ring.  
Make sure the ringer switch setting on High position.
4. If the Hands Free speaker does not work.  
Verify that the line cord has connection is correct and tightly secured.  
Adjust the speaker volume level, and check the batteries are not exhausted.
5. All the memories lose.  
All the memories will be lost within 30 seconds, if the telephone line cord disconnected when the batteries replacing. Then, you have to program all memory banks again.
6. Caller name and number do not display.  
Did you wait for the second ring before picking up the phone or pressing the hands free button ? The caller ID will only detect information between the first and second ring.
7. Contact your telephone company if the problem continues for more than 24 hours. The telephone company may be experiencing temporary line.