

CI 2717 CALLER ID DISPLAY PHONE

Thank you for purchasing this Design Caller ID Display Telephone. This design telephone is one of a new design and innovation series. It performs all basic functions with incoming call display supported by your network providers and most PABX switching system (please consult your switching system provider for details)

TELEPHONE FEATURES

- Large LCD with 3 lines display
- Conversation timer
- Real time & date display
- Last number redial
- On hook pre-dialing function
- Flash function
- Flash time setting
- Music on hold function
- Area code setting
- Prefix code setting
- Tone/Pulse dialing
- Operate in AAA x 3pcs alkaline batteries

CALLER ID FEATURES

- CALLER ID dual mode system (DTMF & FSK)
- Real time calibrated by Caller ID message automatically
- 50 sets incoming call memory
- Call back from incoming call memories
- Remove incoming call memories (single & all)
- New incoming call indication
- Total calls, new calls, repeat call & call sequence display
- Error incoming call display “Private / Error / Out of area”

INSTALLATION

Open the battery compartment underneath the unit and insert three “AAA” size alkaline batteries. Please note the correct positioning (+ and -). Connect the modular plug of the telephone line cord into the modular jack at the rear of the telephone base. At the end of this modular plug connect to the telephone line wall jack. Insert the handset coil cord modular plug into the jack at the rear of telephone base. Then, the LCD display is turn on.

A. MAKING A CALL

1. Lift the handset.
2. Wait for the dial tone and then dial the telephone number.
3. To terminate the call, replace the handset onto the base unit.

B. ON HOOK PRE-DIALING

1. During the on hook state, press the telephone numbers.
2. Press [REDIAL] and Lift the handset, the desired phone number will dial out automatically.

C. DIAL OUT THE NUMBER FROM INCOMING CALL MEMORY

1. Press [UP] / [DOWN] to search the incoming call number.

2. Press [REDIAL] button and lift the handset.

D. DELETE THE CALLER ID CALL

1. Press [UP] / [DOWN] to select the desired incoming call number.
2. Press [DEL] key to erase the phone number.

E. REDIAL THE LAST NUMBER

Lift the handset and press [REDIAL] key, the desired number will dial out automatically.

F. TALKING TIMER

When the handset lift up, the talking timer will be enabled automatically.

G. SETTING MODE

During the on-hook state, press the [SET] key to enter the setting mode, and press [UP / DOWN] key to select the setting.

1) Date and Time Setting

1. Set “YEAR-MONTH-DATE-TIME”.
2. Press [UP] / [DOWN] key to edit.
3. Press [SET] to confirm and continue on the next setting.
4. Or press [DEL] to exit the setting mode.

2) Area Code Setting Mode (5 digits)

1. After completed the date and time setting, press [SET] key again to continue on area code setting mode, and LCD will shows “COdE”.
2. Press [UP] / [DOWN] key to set the area code (e.g. Area code 755: set 755 - -).
3. Press [SET] key to confirm and continue on the next setting.
4. Or press [DEL] to exit the setting mode.

3) Dial Prefix for Long Distance (5 digits)

1. After completed the area code setting, press [SET] key again to continue on prefix code setting mode, and LCD will shows “LCOdE”.
2. Press [UP] / [DOWN] key to set the prefix code.
3. Press [SET] key to confirm and continue on the next setting.
4. Or press [DEL] to exit the setting mode.

4) Flash Time Setting

1. After completed the area code setting, press [SET] key again to continue on flash time setting mode, and LCD will shows “FL ASH”.
2. Press [UP] / [DOWN] key to set the flash time, 90/120/180/300/600/1000.
3. Press [SET] key to confirm and continue on the next setting.
4. Or press [DEL] to exit the setting mode.

5) Setting the Auto IP

1. After completed the flash time setting, press [SET] key again to continue on Auto IP setting, and LCD will show “AUTO IP”.
2. Press [UP] / [DOWN] to set the auto IP dialing on or off.
3. Press [SET] key to confirm and continues on the next setting.
4. Or press [DEL] to exit the setting.

6) Setting the Tone / Pulse Dialing

1. After completed the Auto IP setting, press [SET] key again to continue on tone/pulse dialing mode setting, and LCD will show “P-T”.
2. Press [UP] / [DOWN] to set the tone or pulse dialing.

3. Press [SET] key to confirm and continues on the next setting.
4. Or press [DEL] to exit the setting.

H. MUSIC ON HOLD

1. During the conversation, you can press [HOLD] key to hold up the line. The other end will hear the music.
2. And press the [HOLD] key again to return the conversation.

I. CALLER ID DISPLAY

1. If you subscribe to caller ID services from your local telephone company, this telephone will show the call information on the display screen, and the current date and time will also be updated.
2. When the incoming call received, the number of new calls "NEW" and the total number of calls "IN XX" will appear on the display.
3. Press [UP] / [DOWN] key to view the incoming call number.
4. If the incoming call is a new calling, display will show as "NEW". And, the repeat calling will display as "REP".
5. Any error or corrupted information received, the display will show "---E---"
6. If the caller has exercised the option to prevent his name and number from being sent, "---P---" will be shown on the screen.
7. "---O---" will display, when some one calls from an area where the telephone company is not offering the caller identification services or an area that is not yet providing name and number delivery to your area via the long distance network.
8. When caller ID memory is full, it will automatically delete the oldest calls in order to make a room for the new ID number.

Note : The caller ID will only detect information between the first and second rings. You should wait for the second ring before picking up the phone or pressing the hands free button.

MAINTENANCE

1. Do not position in areas of high humidity, dust, high temperature, mechanical shock or strong sunlight.
2. Do not position in bathrooms or near water.
3. Do not disassemble the telephone, it contains no user-serviceable parts.
4. Do not place this product on an unstable cart, stand or table. The product may fall and causing serious damage to itself.
5. It is recommended to disconnect the telephone line from the wall socket during the thunderstorms, as lightning might seriously damage the telephone. The warranty does not cover damage caused by lightning.
6. Do not attempt to recharge the batteries that are used with this product.
7. All batteries should be replaced at the same time. Mixing fresh and exhausted batteries could increase internal cell pressure and rupture the exhausted batteries.

FAULT FINDING

1. No dial tone.

Make sure all connection of coil cord and line cord are connected securely to the jacks.

Check the telephone operation in master telephone socket. There may be a fault with the line in which case contact your network operator.

2. No display on the LCD.

Make sure the battery has put in the correct positions (+ and -) or replace another new alkaline batteries, and adjust the contrast level.

3. Do not ring.
Make sure the ringer switch setting on High position.
4. All the memories lose.
All the memories will be lost within 30 seconds, if the telephone line cord disconnected when the batteries replacing. Then, you have to program all memory banks again.
5. Caller name and number do not display.
Did you wait for the second ring before picking up the phone or pressing the hands free button ? The caller ID will only detect information between the first and second ring.
6. Contact your telephone company if the problem continues for more than 24 hours. The telephone company may be experiencing temporary line.