

DP1108 DESIGNER TELEPHONE INSTRUCTION MANUAL

Thank you for purchasing this Designer Telephone.

This design telephone is one of a new design and innovation series. It performs all basic functions supported by your network providers and most PABX switching system (please consult your switching system provider for details)

ACCESSORIES

The following items are included in the package of this Designer Telephone:

- Handset with coil cord
- Line cord
- Desktop and wall mount stand
- Wall mounting kits
- Instruction manual

FUNCTIONS

- 3 direct memories
- In use LED indicator
- Ringer volume control (Hi/Mi/Lo)
- Last number redial
- Pause
- Flash

MAKING A CALL

1. Lift the handset.
2. Wait for the dial tone and then dial the telephone

DIRECT MEMORY

1. Lift the handset.
2. Press the (STORE) button and press the desired store number.
3. Press (M1...M3) to save the desired direct memory.

DIAL FROM THE DIRECT MEMORY

1. Lift the handset.
2. Press the (M1...M3) button to dial out the saved phone number..

RINGER VOLUME CONTROL

Switch the ringer volume control on the base unit bottom.

LAST NUMBER REDIAL

1. To redial the last number called, lift the handset and press the (REDIAL) button. The number will be dialed automatically.
2. The number will be retained in memory until another number is dialed.

FLASH

1. Press the (FLASH) button, the phone line will break and disconnected.
2. You can use this function to utilize the special services. (please consult your switching system provider for details)

PAUSE

For some network services such as home banking or PABX's which give a secondary dial tone before further dialing, it may be necessary to insert a pause between digits.

MAINTENANCE

1. Do not position in areas of high humidity, dust, high temperature, mechanical shock or strong sunlight.
2. Do not position in bathrooms or near water.
3. Do not disassemble this telephone, it contains no user-serviceable parts.
4. It is recommended to disconnected the telephone line from the wall socket during the thunderstorms, as lightning might seriously damage the telephone. The warranty does not cover damage caused by lightning.

FAULT FINDING

1. Make sure all connection of coil cord and line cord are connected securely to the jacks.
2. Check the telephone operation in master telephone socket. There may be a fault with the line in which case contact your network operator.
3. If the telephone does not ring, lift and replace the handset, and make sure the ringer switch has switched in "HI" position.

WALL MOUNTING

If you are wall mounting this telephone, the position of two holes is 19mm apart.